

Recommended spare parts

Power supply

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
129633	Green power lamp assembly		1
027634	Filter housing		1
027664	Filter element		1
129792	Chopper assembly	CH1	1
127039	6" fan :230 CFM, 115 VAC 50-60 HZ		1
027079	10" fan :450-550 CFM, 120 VAC 50-60 HZ		1
003149	Relay: pilot arc, 120 VAC	CR1	1
041837	PCB: I/O		1
003139	Contactora	CON1	1
109004	Current sensor: hall 100 amp, 4 volt		1
129791	Start circuit assembly	PCB1	1
108263	Fuse: 175 amp, 250 volt	F3	1
008551*	Fuse: 7.5 amp, 600 volt	F1, F2	2
041909	Control PCB	PCB3	1
041802	Power distribution PCB	PCB2	1
129793	Flow switch assembly	FLS	1
027185	Heat exchanger fan: 4"		1
006075	Check valve: 1/4" FPT		1
129995	Solenoid valve assembly	CLT SOL	1
129994	Pump assembly: 70 gpm, 200 psi		1
031113	Motor: 1/3 HP, 240 volt, 50-60 HZ		1

* 400, 480 and 600 volt power supplies

Ignition console

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
041817	HFHV Ignition PCB		1
129854	Transformer	T1	1

Gas console

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
041805	Power distribution PCB	PCB1	1
041822	Valve driver PCB	PCB3	1
005263	Pressure sensor	PT1-PT3	1
006109	Solenoid valve	SV1-SV14	2
005262	Illuminated power switch	SW1	1

Off-valve

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
006109	Solenoid valve	V16-V19	1