

## PARTS LIST

---

### Recommended spare parts

#### Power supply

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
129633	Green power lamp assembly		1
027634	Filter housing		1
027664	Filter element		1
129792	Chopper assembly	CH1	1
127039	6" fan: 230 CFM, 115 VAC 50-60 HZ		1
027079	10" fan: 450-550 CFM, 120 VAC 50-60 HZ		1
003149	Relay: Pilot arc, 120 VAC	CR1	1
041837	PCB: I/O		1
003217	Contactora (200 VAC-240 VAC)	CON1	1
003233	Contactora (380 VAC-600 VAC)	CON1	1
109004	Current sensor: Hall 100 amp, 4 volt		1
229238	Start circuit assembly	PCB1	1
008551*	Fuse: 7.5 amp, 600 volt	F1, F2	2
228548	Control PCB	PCB3	1
041802	Power distribution PCB	PCB2	1
229206	Flow switch assembly	FLS	1
006075	Check valve: 1/4" FPT		1
229229	Solenoid valve assembly	CLT SOL	1
228171	Pump assembly with clamp: 80 gpm, 200 psi		1
228230	Motor with clamp: 1/3 HP, 240 volt, 50-60 HZ		1

\* 400, 415, 480, and 600 volt power supplies

#### Ignition console

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
041817	HFHV Ignition PCB		1
129854	Transformer	T1	1

#### Selection and metering consoles

<u>Part Number</u>	<u>Description</u>	<u>Designator</u>	<u>Qty.</u>
041828	Control PCB		1
041897	Power distribution PCB		1
041822	Valve driver PCB		1
006109	Solenoid valve		2
005263	Pressure sensor		1
228984	Solenoid coil		1
006112	Replacement solenoid coil		1